

TRUNK RADIO		
Out of Service	When the radio is out of contact with the Trunk Network , a Rotating Bar is displayed. Calls cannot be made or received during this time.	
Make a Call	▲▼	Scroll through Phonebook to select entry
	S or PTT	Make a Call
	F3	End Call. (same as microphone on hook)
Receive a Call	S	Answer an Incoming Call (same as lifting microphone off hook)
SUBMENUS: All submenus may not be programmed.		
Recall	▲▼	Scroll through Previous Calls
	S	Make a Call
	F3	Exit
Stored Calls	▲▼	Scroll through Stored Calls
	S	Make a Call to Sender
	F3	Delete Item
	On/Off	Exit (short press)
Status Calls	▲▼	Scroll to Status
	S	Send Status
	F3	Exit

WARNINGS

1. Do NOT operate your radio, without a handsfree kit, whilst driving a vehicle.
2. Do NOT operate your radio in an explosive atmosphere. Obey the 'Turn Off Two-way Radios' signs where these are posted, e.g. on a petrol station forecourt.
3. Do NOT touch the antenna while the radio is transmitting.
4. Do NOT operate the radio if the antenna has become disconnected or damaged.

TMC Radio is committed to continuous improvement, for this reason, specifications may vary without prior notice.

SRM9020plus BRIEF GUIDE



Common to PMR and Trunk Radios







PMR Radios Only





Trunk Radios Only

INTRODUCTION

The SRM9000 series radio is an advanced mobile transceiver and microphone using the latest DSP technology. It is designed for easy installation in today's vehicle where space is at a premium. SRM9000 can operate in a wide range of conventional and trunked radio systems. Your radio consists of an SRM9000 transceiver for local or remote installation, and an SRM9020plus Alphanumeric Control Microphone, which is designed for mounting within view and easy reach of the driver.

The Transceiver is software programmable with many customisable parameters to suit your individual requirements. Ask your dealer for specific configured functions, available upgrades and a list of the ancillaries available.

PMR DISPLAY SYMBOLS	
	Signal at Loudspeaker
	Invalid Signal
	Transmitting
	Scanning Enabled (rotating symbol)
	Searching Frequencies
	Stored Calls Present

TRUNK DISPLAY SYMBOLS	
	Voice Call in Progress
	Call Setup in Progress (Animated Icon)
	Transmitting
	Out of Service/Searching (rotating symbol)
	Stored Calls Present

COMMON	
Switch On	Press and release the On/Off button.
Switch Off	Press and hold down the On/Off button for more than 2 seconds, a beep will sound and the radio will switch off as the button is released. <i>Note: The radio can be programmed to switch off automatically after a set period of inactivity.</i>
Volume	Press the Up or Down volume button to adjust the speaker volume.
Alert Volume	Hold down the On/Off button and press the Up or Down vol. button to adjust Alert Level.
Menu Select	Press the M button to select submenus. The submenu name is displayed briefly. Submenus will clear to the Main Menu after several seconds of inactivity.
Special Function	Press and release the Function (F1..4) buttons to activate the programmed function.
<i>Note:</i>	<i>The microphone must be on-hook for Handsfree operation.</i>

PMR RADIO	
Transmit	Remove the microphone from the cradle and hold it approximately 10cm from the mouth. Press and hold the PTT switch and speak, release to listen.
Receive	When a valid signal is received, audio can be heard from the speaker. If the channel is in use by another user Group, the display will show — and there will be no audio.
Change Channels	Use scroll Up/Down ▲▼ to change channels.
SUBMENUS: All submenus may not be programmed.	
Phone Book	▲▼ Scroll through Phonebook list
	S Send Selcall
	M Go to other Menu
Status	▲▼ Scroll through Status list
	S Send Status
	F3 Go to other Menu
Stored Calls	▲▼ Scroll through Stored Calls
	S Send reply Selcall
	F3 Exit
Mute	▲▼ Change Mute level
	S Exit
Scan Function	▲▼ Change Scan Group
	F3 Skip Channel (cancelled by ▲▼)
	S Exit Scan Function

Consult the main User Guide, TNM-U-E-0085 (Trunk) or TNM-U-E-0086 (PMR), for a more detailed description of operation and details of the display symbols.

TNM-U-E-0084 V1.0e

© TMC Radio 2007

